RadioShack.

Ages 6 & Up
Cat. No. 68-1057

Your Astro Countdown Clock is a multi-functional desk mate and holiday ornament.

FEATURES:

TIME: displays the hours, minutes and seconds.

CALENDAR: displays the month, date and year.

ALARM: sounds when the countdown time elapses or at the time selected by you.

COUNTDOWN: allows you to program a special date and time, counting down the number of days and time remaining.

ORNAMENT: the small hook in the collar allows you to hang your Astro clock as a holiday ornament.

To turn on your clock, depress the ON/OFF button with the tip of a pen. The ON/OFF button is located on the back of the clock to the left of the battery door. Before programming your Astro Countdown Clock please be sure to remove the clear plastic film covering the display screen.

SETTING THE TIME:

1. Repeatedly press the MODE button until "TIME" appears in the upper far left corner of the display.
2. Press and hold the SET button for three seconds until the hour digit starts flashing.
3. Press the ADJUST button to adjust the flashing hour digit to the time desired.
4. Press the SHIFT button to select the next digit to be programmed. The selected digit will flash.
5. Repeat steps 3 and 4 to set the minutes and seconds to the desired time.
6. Press the SET button once when all digits are set to the desired time.
7. To switch between 24 hour clock and 12 hour clock, press the ADJUST button in the Time mode. A "24" will appear in the lower left corner.



TIME MODE

SETTING THE CALENDAR:

1. Repeatedly press the MODE button until "DATE" appears in the upper left corner of the display.
2. Press and hold the SET button for three seconds until the month digit starts flashing.
3. Press the ADJUST button to adjust the flashing month digit to the date desired.
4. Press the SHIFT button to select the next digit to be programmed. The selected digit will flash.
5. Repeat steps 3 and 4 until the day and year are set to the desired calendar date.
6. Press the SET button once when all digits are set to the desired calendar date.

DATE MODE

SETTING THE ALARM:

1. Repeatedly press the MODE button until "ALARM" appears in the upper right corner of the display.
2. Press and hold the SET button for three seconds until the hour starts flashing.
3 Press the ADJUST button to adjust the flashing hour digit to the desired alarm time.
4. Press the SHIFT button to select the next digit to be programmed. The selected digit will flash.
5. Repeat step 3 to set the minutes.
6 Press the SET button once when all digits are set to the desired alarm time.
7. To turn the alarm on or off, you must be in the alarm mode and press the SHIFT button. The alarm bell icon will appear in the upper right corner of the alarm display and time display.
8. To immediately stop the alarm, press any button. Otherwise the alarm will automatically stop after sounding for one minute.

ALARM MODE

SETTING THE COUNTDOWN:

1. Repeatedly press the MODE button until "COUNTDOWN" appears in the upper center of the display.
2. Press and hold the SET button for three seconds until the month starts flashing.
3. Press the ADJUST button to adjust the flashing month digit to the desired month of your countdown date.
4. Press the SHIFT button to select the next digit to be programmed. The selected digit will flash.
5. Repeat steps 3 and 4 until all digits of the Countdown Mode are set to the desired countdown date and time.
6. Press the SET button once when all digits are set to the desired countdown date and time.
7. To immediately stop the alarm, press any button. Otherwise the alarm will automatically stop after sounding for one minute.

COUNTDOWN MODE

To reset the clock, depress the ON/OFF button twice. The clock will then reset all modes to 12:00 on January 1, 1999.

REPLACING THE BATTERY

Your Astro multi-functional countdown clock and desk mate is supplied with three AG 13 batteries. If the display dims or disappears, replace the batteries. Only batteries of the same or equivalent types as recommended are to be used. Follow these steps to replace the batteries:

1.) Use a screwdriver to unscrew the back panel on the base of the countdown clock. Remove the battery cover.

2.) Remove the old batteries and dispose of them properly. Batteries are to be inserted per the polarity indicated in the battery housing.

WARNING: Never allow children to play with batteries. They can be harmful if swallowed. Always dispose of an old battery promptly and properly. The supply terminals are not to be short-circuited. Different types of batteries or new and used batteries are not to be mixed.

3.) Replace the back cover and tighten the screw.

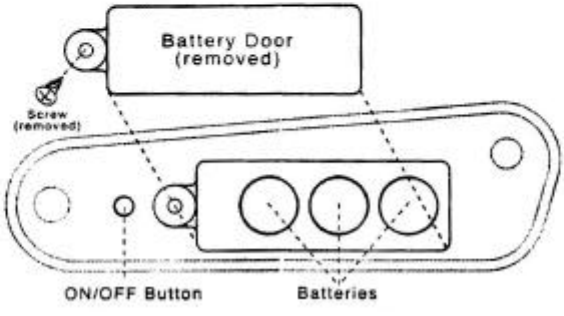

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workman-ship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchises and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN AD-VISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b)any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage;(e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Please retain the details for future reference.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

©1999 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation. Printed in China.

04/99